



How to check the CY Infrared Touch Overlay


1, Connect the CY IR Touch Overlay to a PC with Windows OS.

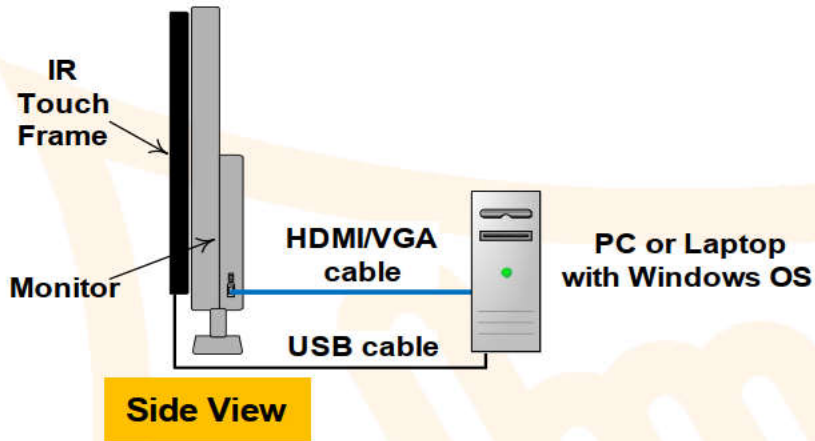


2, Open Windows app "Paint".

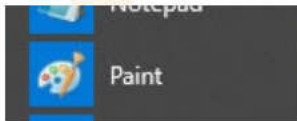


3, Resize the drawing board and test the Touch Overlay on it.

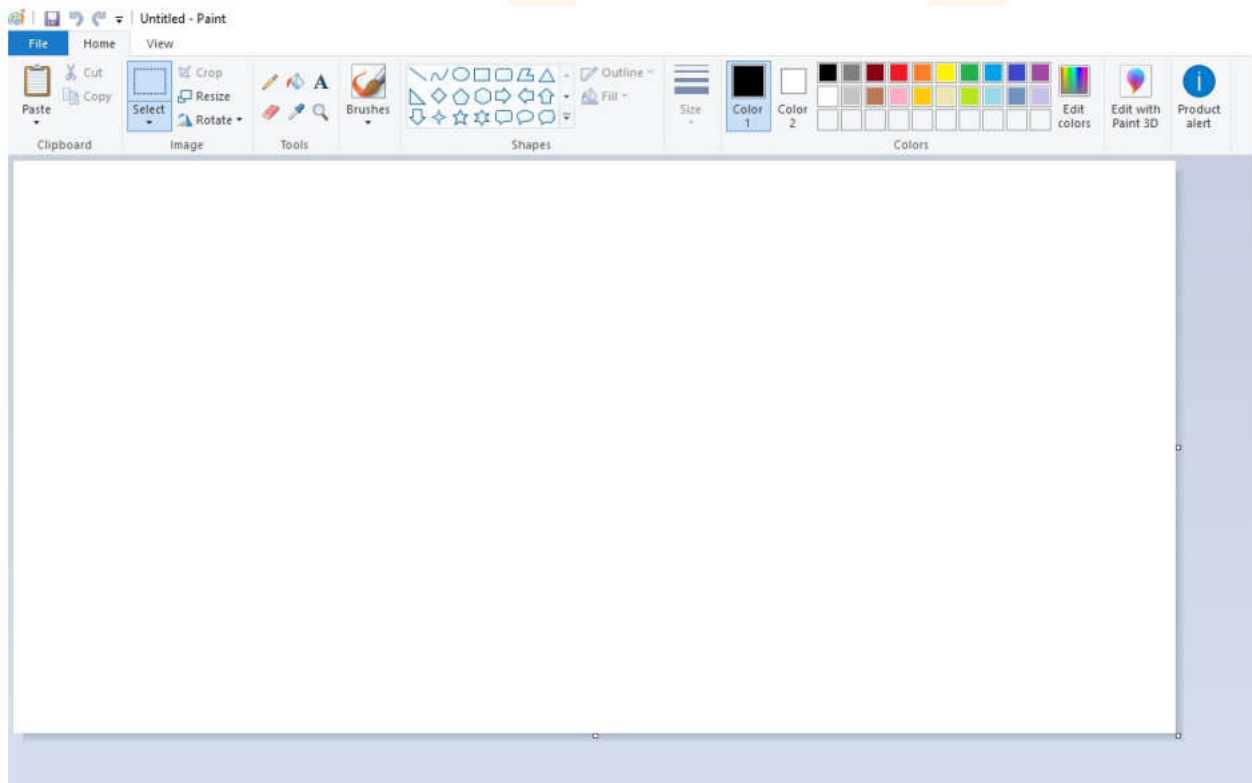

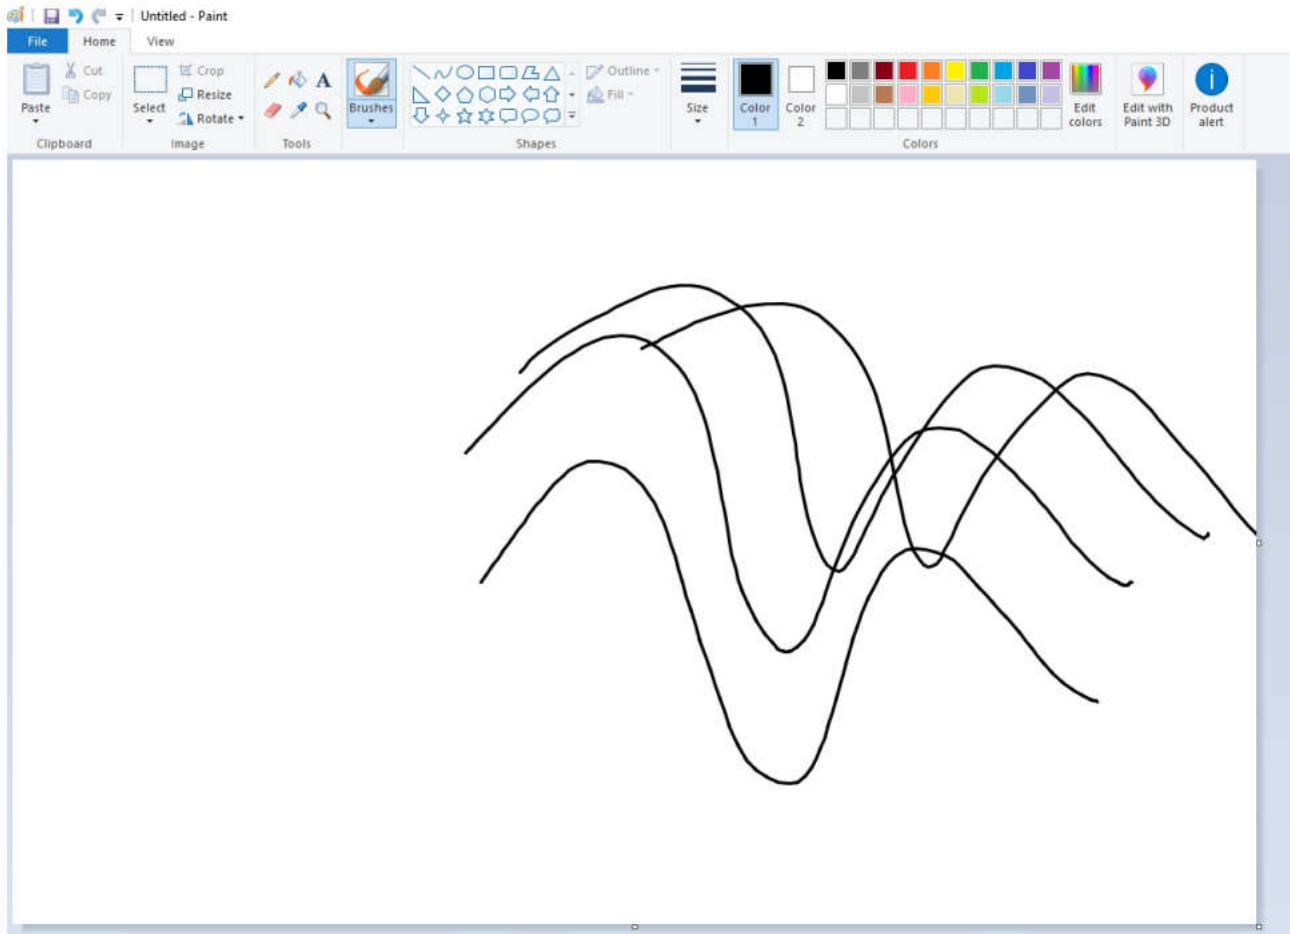

4, If the CY IR Touch Overlay does not work, please check it by the following steps:

a, Find the calibration tools from the following link: <https://www.cynnn.com/?p=683>

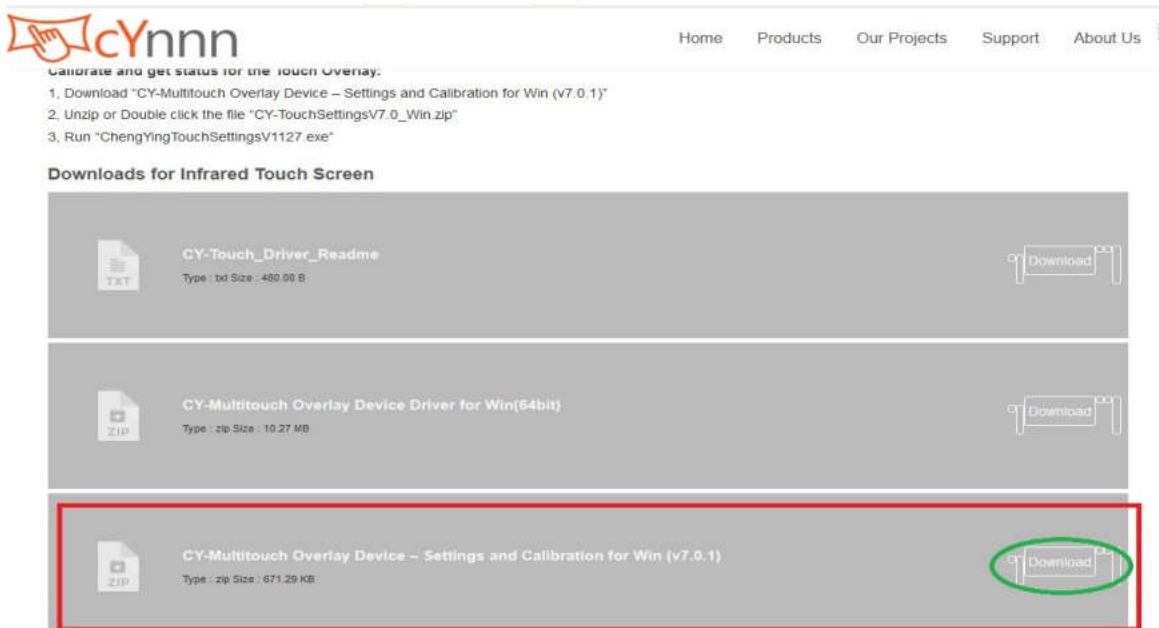


Or Download the tool directly via the link below:


https://www.cynnn.com/?bfd_download=cytouch_calebration_for_windows

b, Unzip and run the tool: CY-TouchSettingsV7.0_Win.exe in WindowsOS,

change "Language"

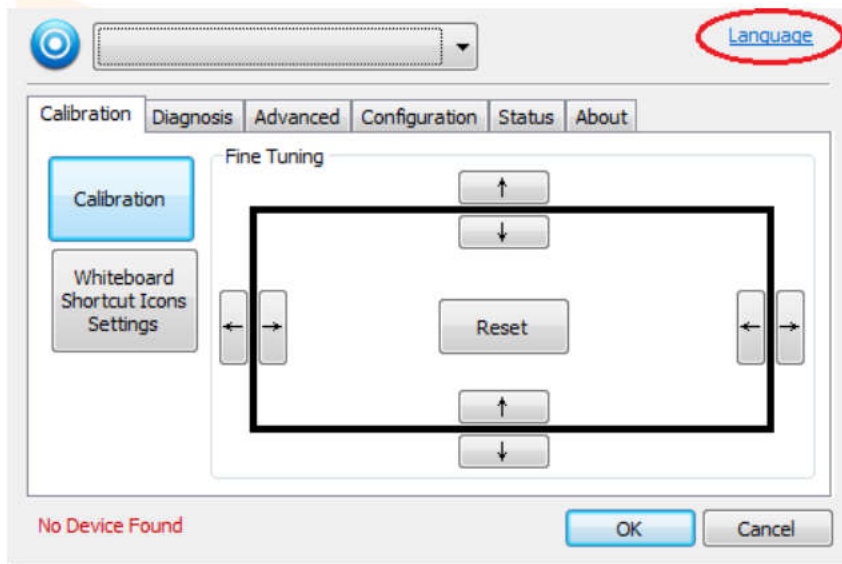


c, Once the CY Touch Overlay is found without error, please test it on app "Paint" or other Touch function supported software.

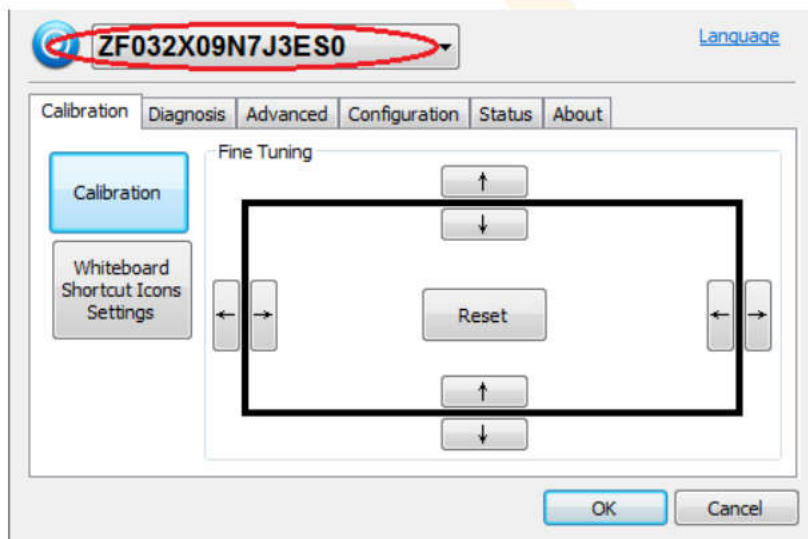


d, Open Windows app "Paint".



e, Resize the drawing board and test the Touch Overlay on it.

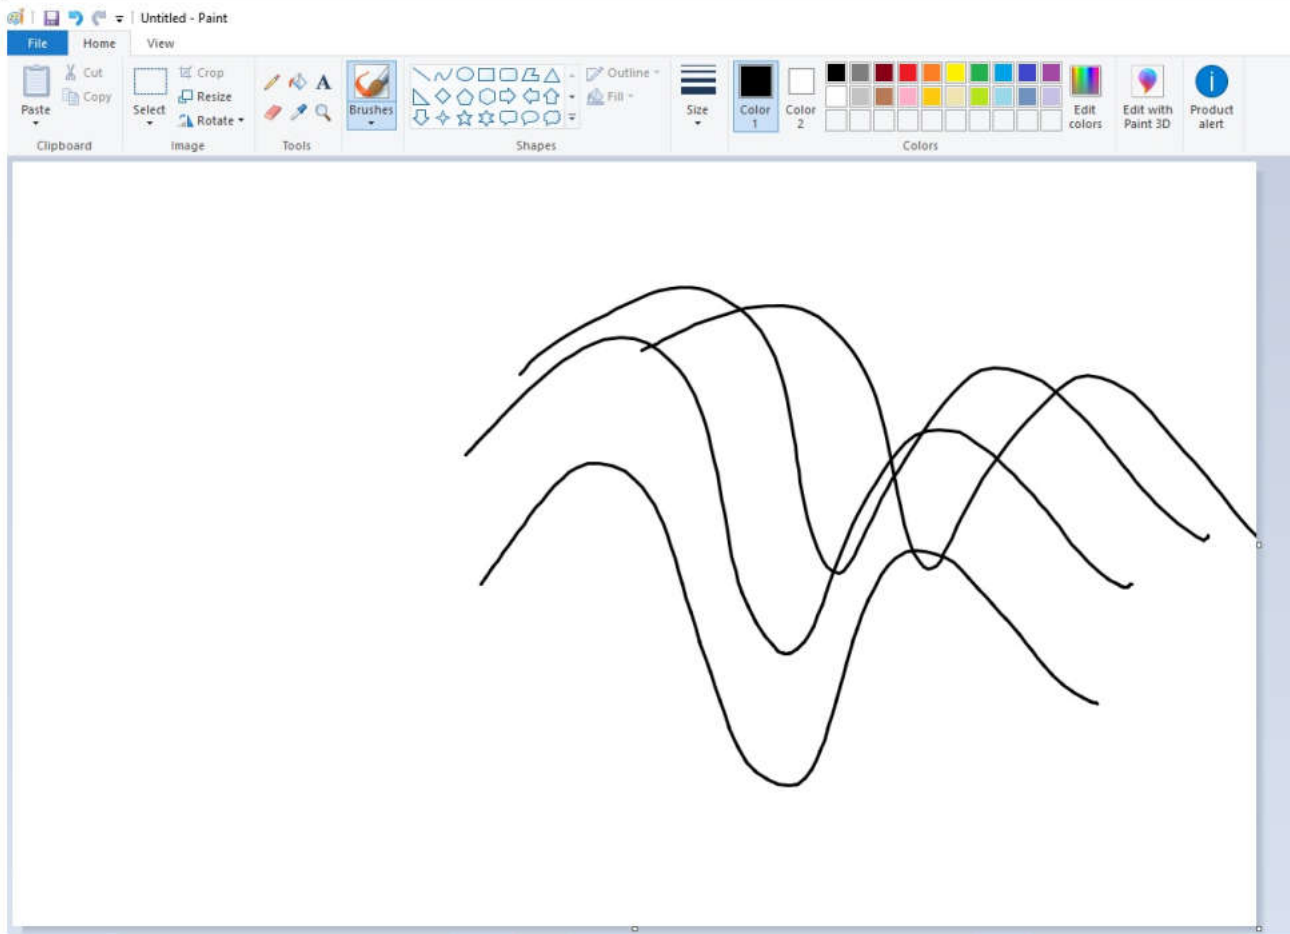


If it shows “No Device found” or the serial number is blank, please check the Touch Overlay corner and the USB cable. Re-plug the CY Touch Overlay to the computer.

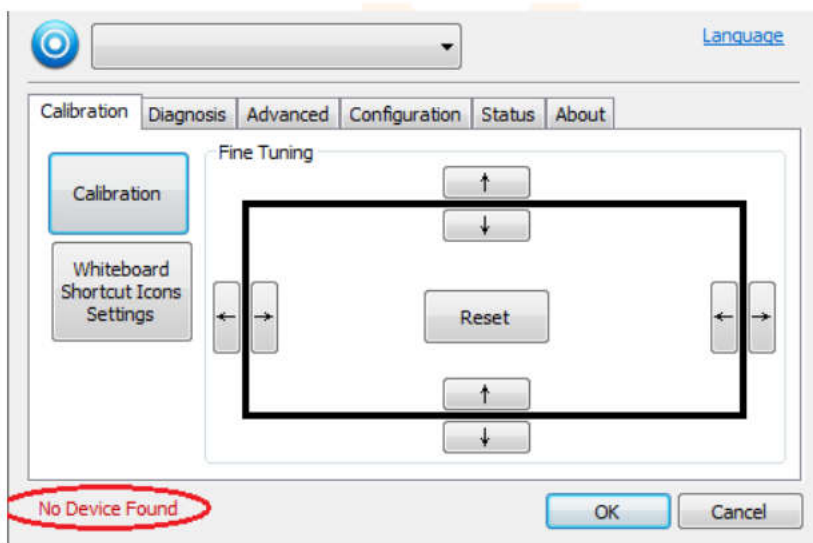

d, Once the device is found with error, please send us the Screen capture of "Status".

(email: supports@cynnn.com)

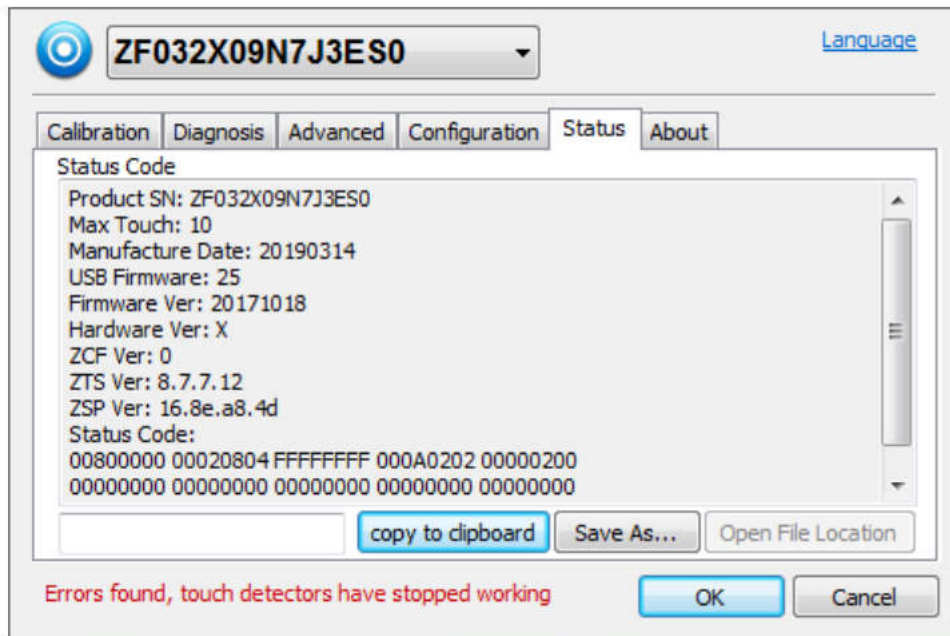

And run Diagnosis and send the diagnosis report to us.

